

FOR 80" 19244560

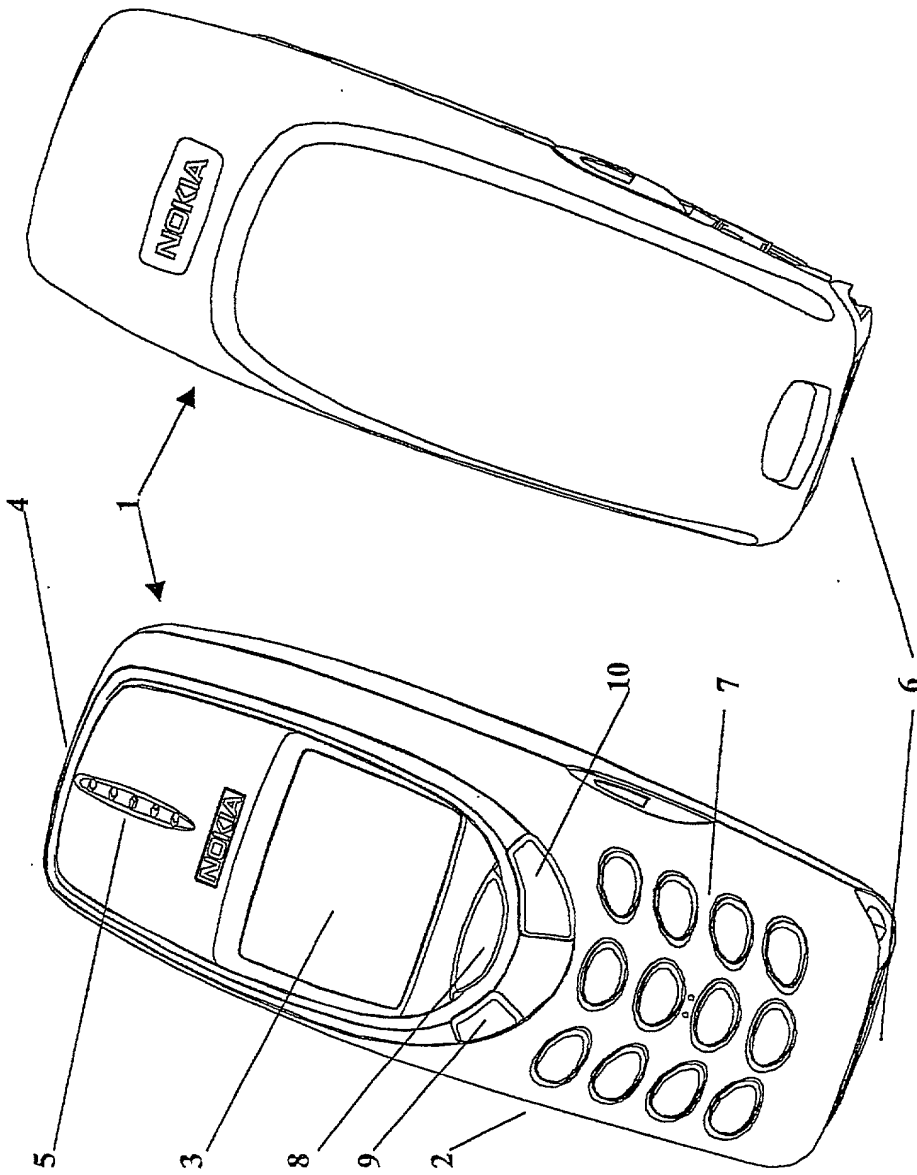 


Fig. 1

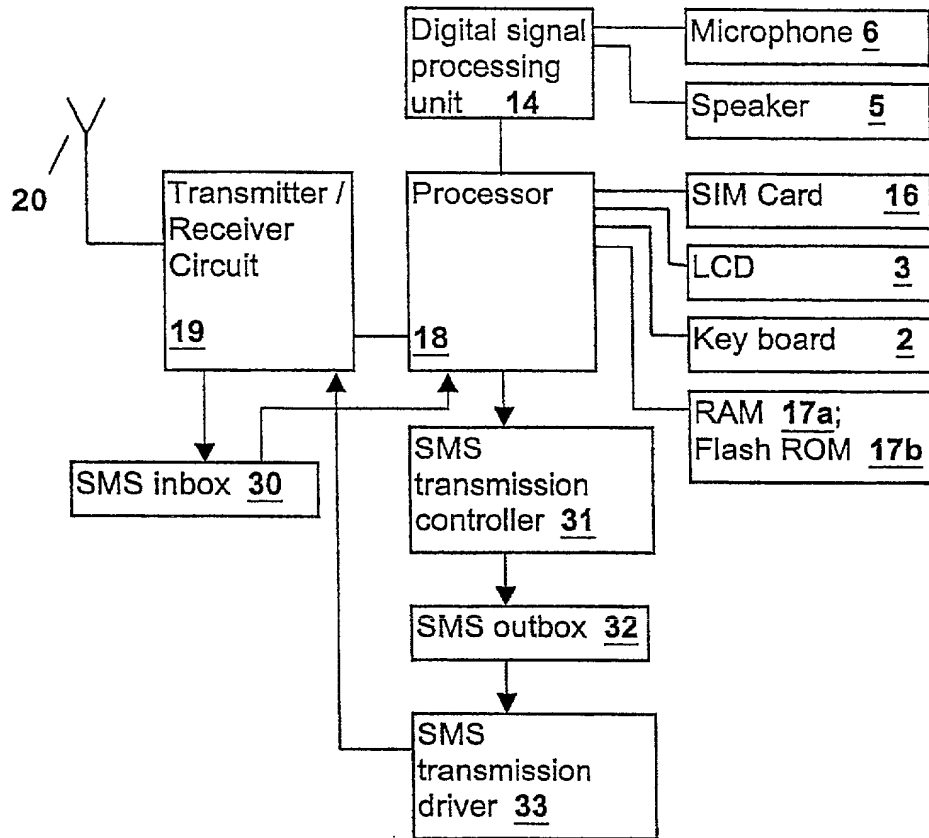 


Fig. 2


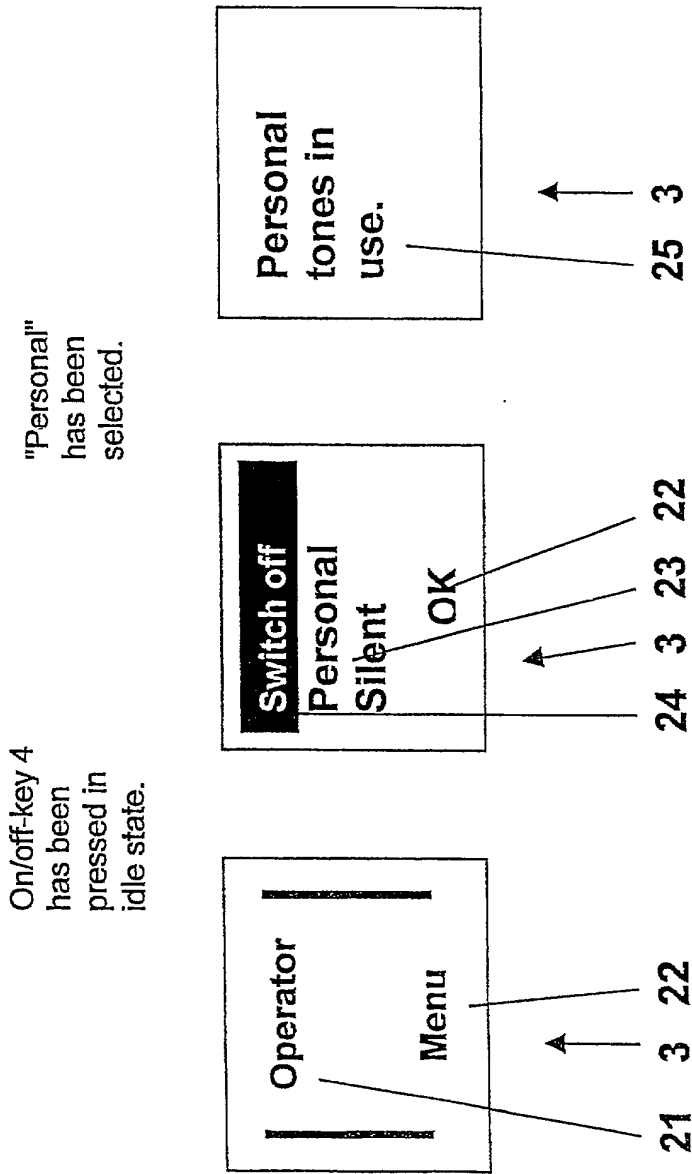 



Fig. 3

"Menu" has
been
selected.

 
"Profiles" has
been
selected.

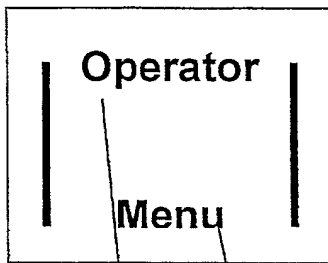

21 22

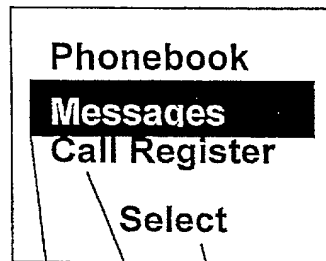 

24 23 22

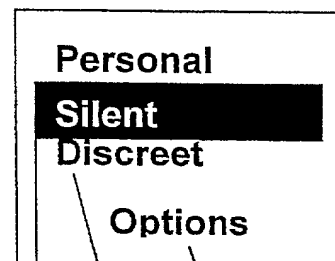 


24 23 22


"Silent" has
been
selected.

"Personalize"
has been
selected.

 
"Ringing
tone" has
been

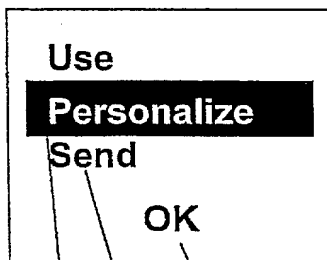

24 23 22

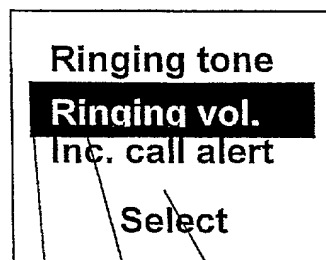 

24 23 22

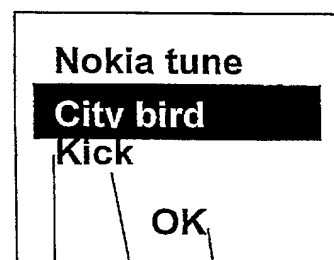 

24 23 22

Fig. 4


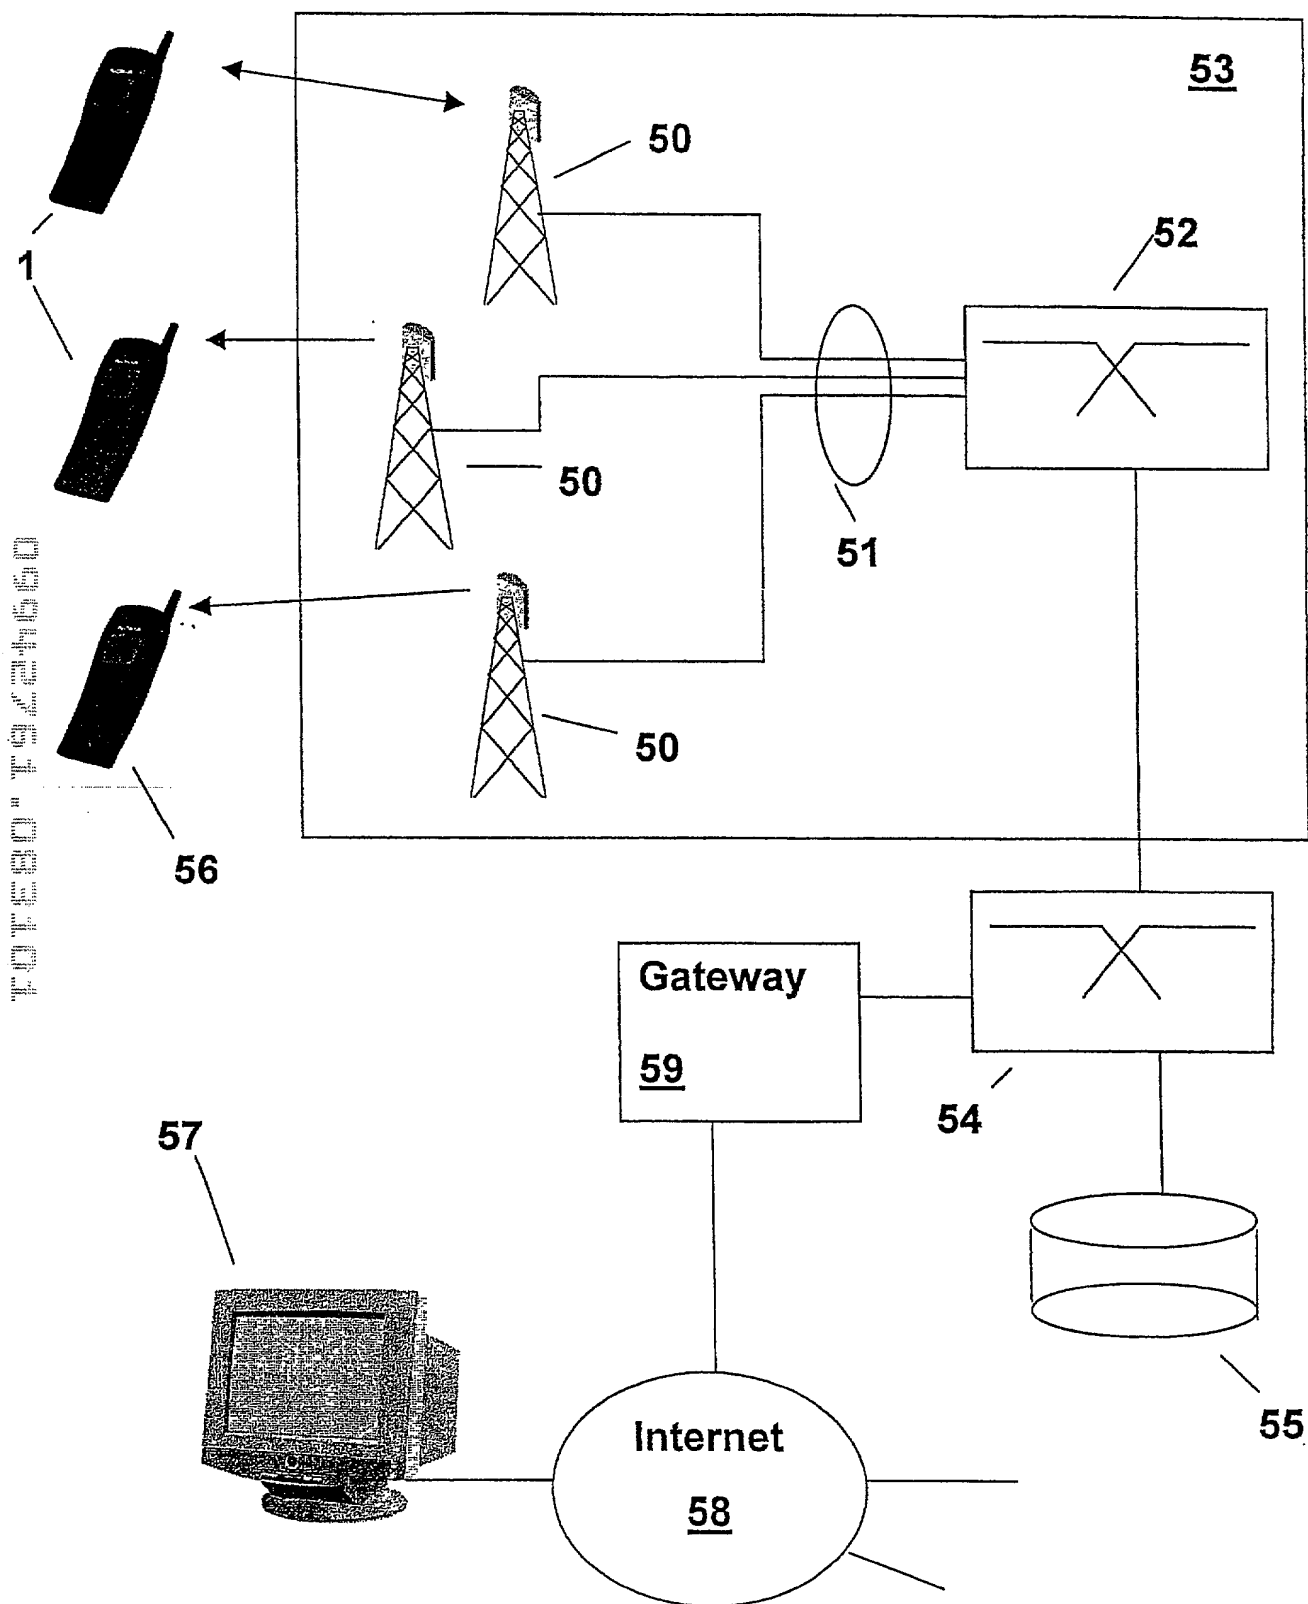 


Fig. 5

 
Fig. 6

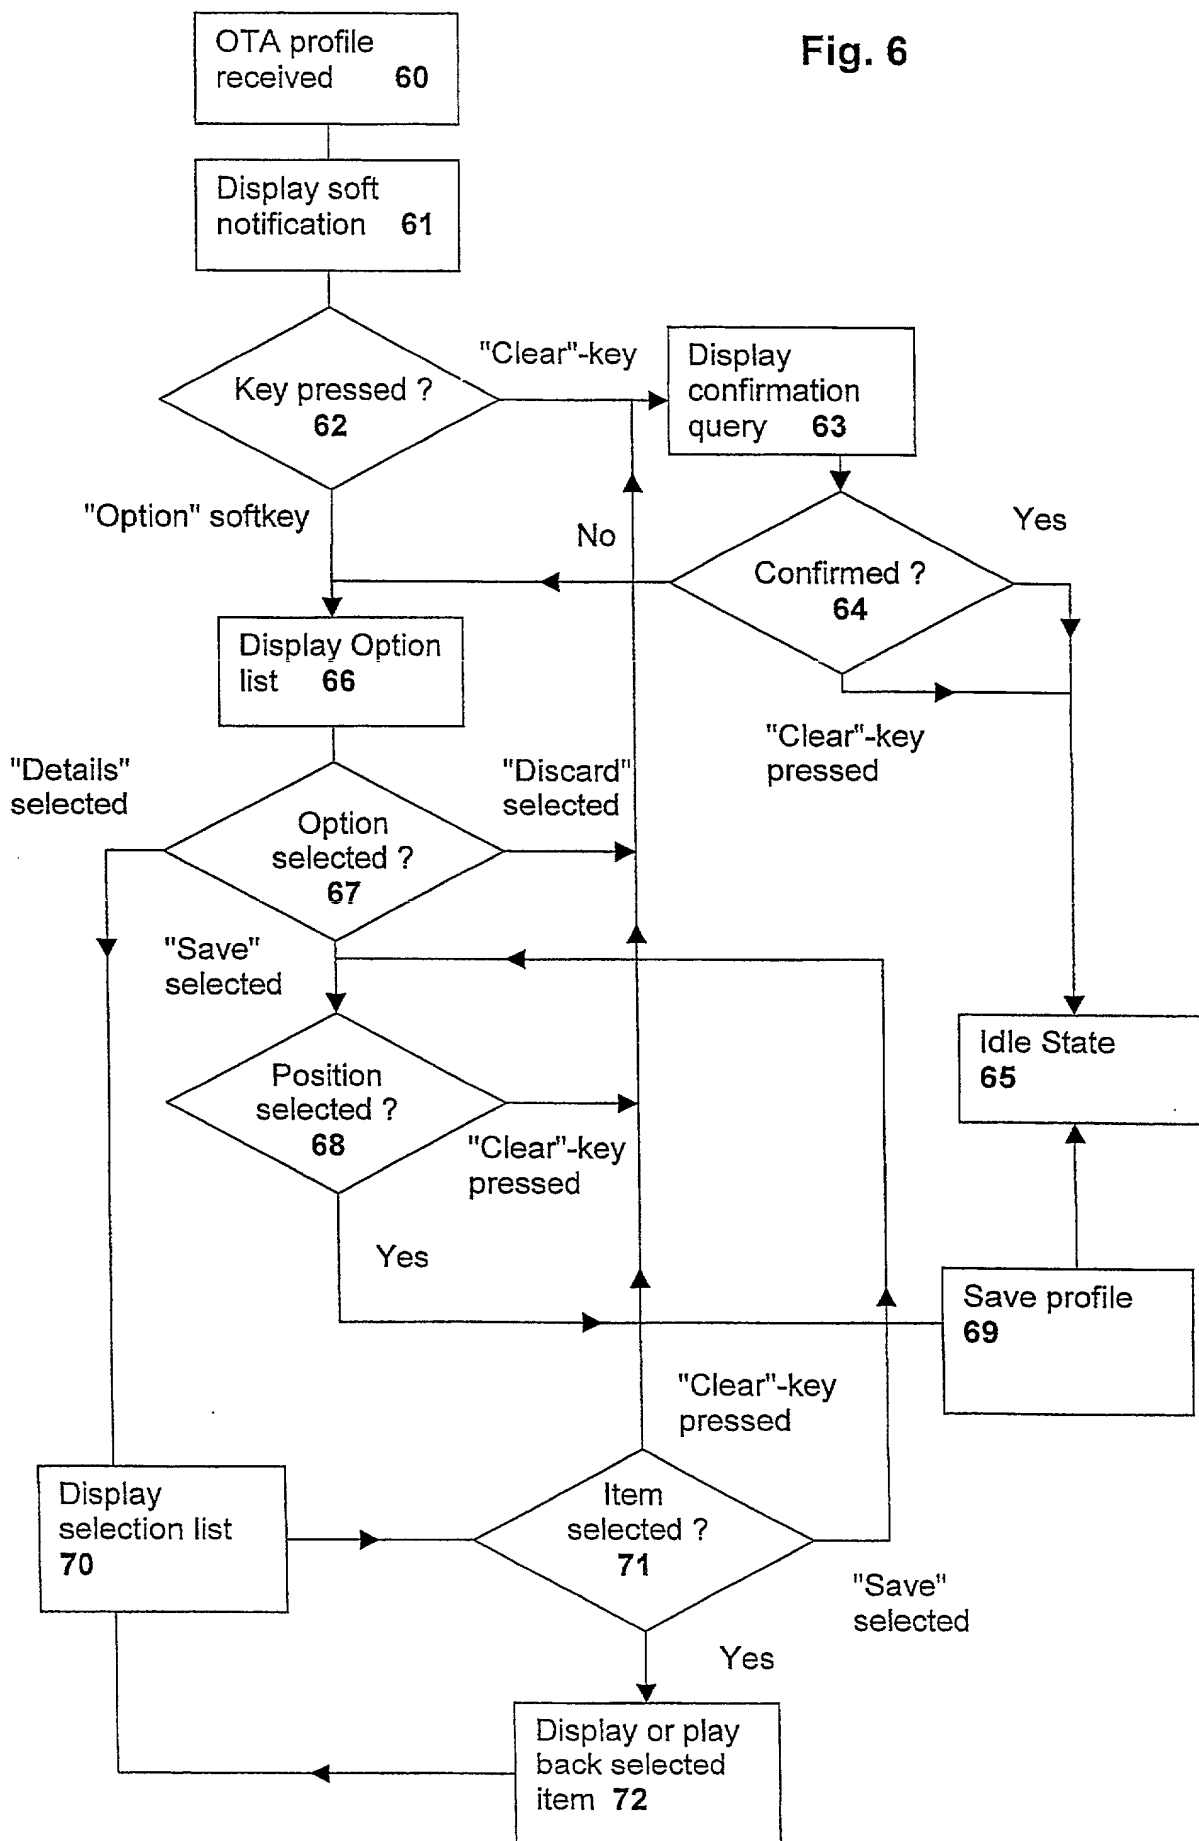


09042761.083404

Ringing tone received.
Soft notification
displayed.

 
"Option" has
been
pressed.

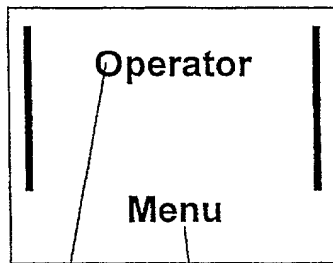

21 3 22

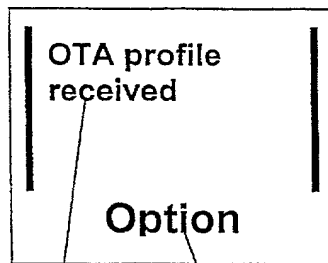 

26 22

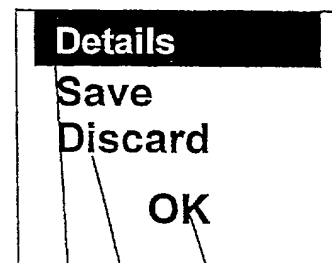 


24 23 22


"Details"
has been
selected.

"Playback" of the
ringing tone has
been selected.

 
"Save" has been
pressed in third
display.

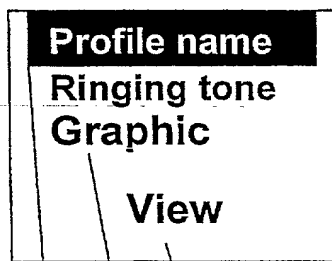

24 23 22

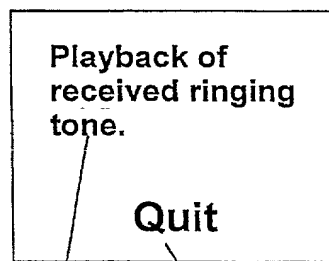 

27 22

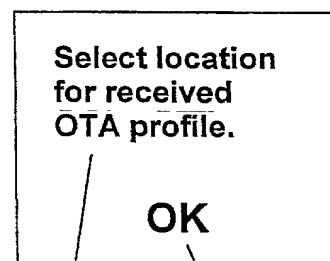 


27 22


"OK" has been
pressed or timeout
has expired.

"OTA profile 1"
has been
selected.

 
"OK" has been
pressed.

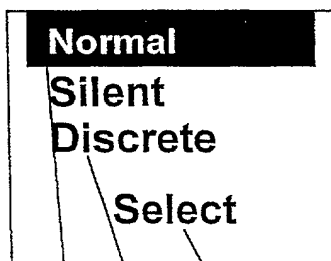

24 23 22

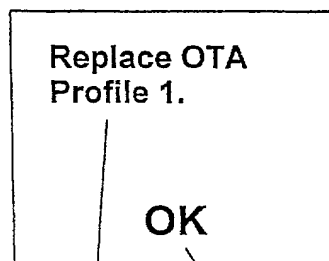 

27 22

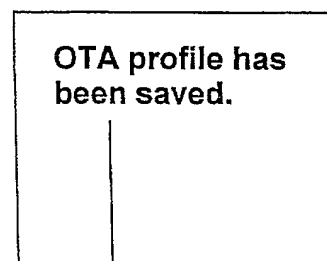 

28

Fig. 7